



HEADPHONES, TRANSMITTER & EXTRAS SET-UP GUIDE



BOOMDISCO.COM
020 7167 8471



CONTENTS

THE HEADPHONES

- 3. WHAT'S IN THE BOX
- 4. THE SIMPLE GUIDE TO USING YOUR HEADPHONES
- 5. SAFETY FIRST
- 6. SET-UP AND USE

TRANSMITTER BG80 PRO

- 7. WHAT'S IN THE BOX
- 8. THE SIMPLE GUIDE TO USING YOUR BG80 PRO TRANSMITTERS
- 9. SAFETY FIRST
- 10-11. SET-UP AND USE

MOBILE TRANSMITTER BG003 PRO

- 12. WHAT'S IN THE BOX
- 13. THE SIMPLE GUIDE TO USING YOUR BG003 PRO TRANSMITTERS
- 14. SAFETY FIRST
- 15-16. SET-UP AND USE

FULLY LOADED TABLETS

- 17. WHAT'S IN THE BOX
- 17. SAFETY FIRST
- 18. SET-UP AND USE

BASIC DISCO LIGHT

- 19. WHAT'S IN THE BOX
- 20. SAFETY FIRST
- 21. SET-UP AND USE

MINI UV BATTENS

- 22. WHAT'S IN THE BOX
- 23. SAFETY FIRST
- 24. SET-UP AND USE

PREMIUM DISCO LIGHT

- 25. WHAT'S IN THE BOX
- 26. SAFETY FIRST
- 27 - 28. SET-UP AND USE

HAZE/SMOKE MACHINE

- 29. WHAT'S IN THE BOX
- 30. SAFETY FIRST
- 31. SET-UP AND USE

BUBBLE MACHINE

- 32. WHAT'S IN THE BOX
- 33. SAFETY FIRST
- 34. SET-UP AND USE

SNOW MACHINE

- 35. WHAT'S IN THE BOX
- 36. SAFETY FIRST
- 37. SET-UP AND USE

TROUBLESHOOTING

- 38 - 40.

IMPORTANT INFORMATION

- 41.

RETURNING THE EQUIPMENT

- 41.



THE HEADPHONES



THE SIMPLE GUIDE TO USING YOUR HEADPHONES



- 1 ADJUSTABLE HEADBAND**
Adjustable to comfortably fit adults and children
- 2 SOFT LEATHERETTE EAR CUSHIONS**
For maximum comfort.
- 3 POWER**
On/off function.
- 4 VOLUME WHEEL**
To adjust volume up or down to suit your preference.
- 5 LED/CHANNEL**
On/off function and channel selection.
- 6 SUPER BRIGHT LED'S**
For the best party vibe and channel identification.
- 7 USB C CHARGING PORT**
For use with Boom chargers (on request option).
- 8 AUX SOCKET**
- 9 CHARGING LED**
Illuminates red when charging, green when fully charged.



SAFETY FIRST

PLEASE READ BEFORE SWITCHING ON:

- 1** Do not use Headphones if they are damaged by water, heat or physical impact etc.
- 2** Do not attempt to repair, modify or replace parts of the product yourself, this could cause serious harm.
- 3** Do not use or store product in or near water, in very humid or hot environments.
- 4** Keep away from heat sources, including radiators, space heaters and heat generating electrical equipment.
- 5** If Boom has supplied you with charging cables:
 - A** Use only the supplied power cables and accessories with the product.
 - B** Disconnect Power after charging, and especially when not being used for long periods. Maximum charge is normally reached after a maximum of 4 hrs charging. Overcharging can cause damage to the batteries.
 - C** When charging, ensure that supply is properly connected, with no visible signs of damage. Ensure that temperature is moderate and that equipment and chargers are not in direct sunlight or placed on a heat source.
 - D** Do not over-load electrical supply sockets.
 - E** Failure to comply with safety guidelines can result in electrical shock, injury, fire, or damage to equipment and will invalidate any warranty.
 - F** Do not use headphones at high volume levels or for extended periods of time.

HAVING TROUBLE OR SOMETHING NOT WORKING?

If you are having trouble please check our 'troubleshooting' section on page 38. or call us on **0207 7167 8471**

SET-UP AND USE

1



CHECK THE JUICE

All our headphones arrive fully charged, this will give you up to 9 hours of usage. To check the battery level, simply tap the PWR on 'Right' headphone (marked 'R') 4 led bars will illuminate on the power indicator.

2



FIRE 'EM UP!

Lightly press and hold the PWR button on 'Right' headphone (marked 'R') for 2 seconds to switch on the headphones.

3



FIND YOUR JAM

Now the headphones are on, lightly tap the CH/LED' to automatically switch between available live channels. The LEDs will change colour if music is being transmitted on multiple channels. (Channel 1 = Red, Channel 2 = Green, Channel 3 = Blue)

4



CRANK IT (SAFELY OF COURSE)

To adjust the volume to best suit you, simply scroll the volume wheel. We suggest that adults make this adjustment for young children.

NB: You can normally adjust the maximum volume using the device from which you are playing the audio.

5



SET PARTY MODE

 
There are 3 LED modes that can be selected, simply scroll through by lightly pressing and holding the 'LED' button on the 'Left Headphone for 2 seconds.

- 1.** LED's on- Static illumination
- 2.** LED's on- Dynamic illumination
- 3.** LED's off

When Dynamic Illumination is selected your headphones will flash to the beat of the music!



TRANSMITTERS: BG80 PRO

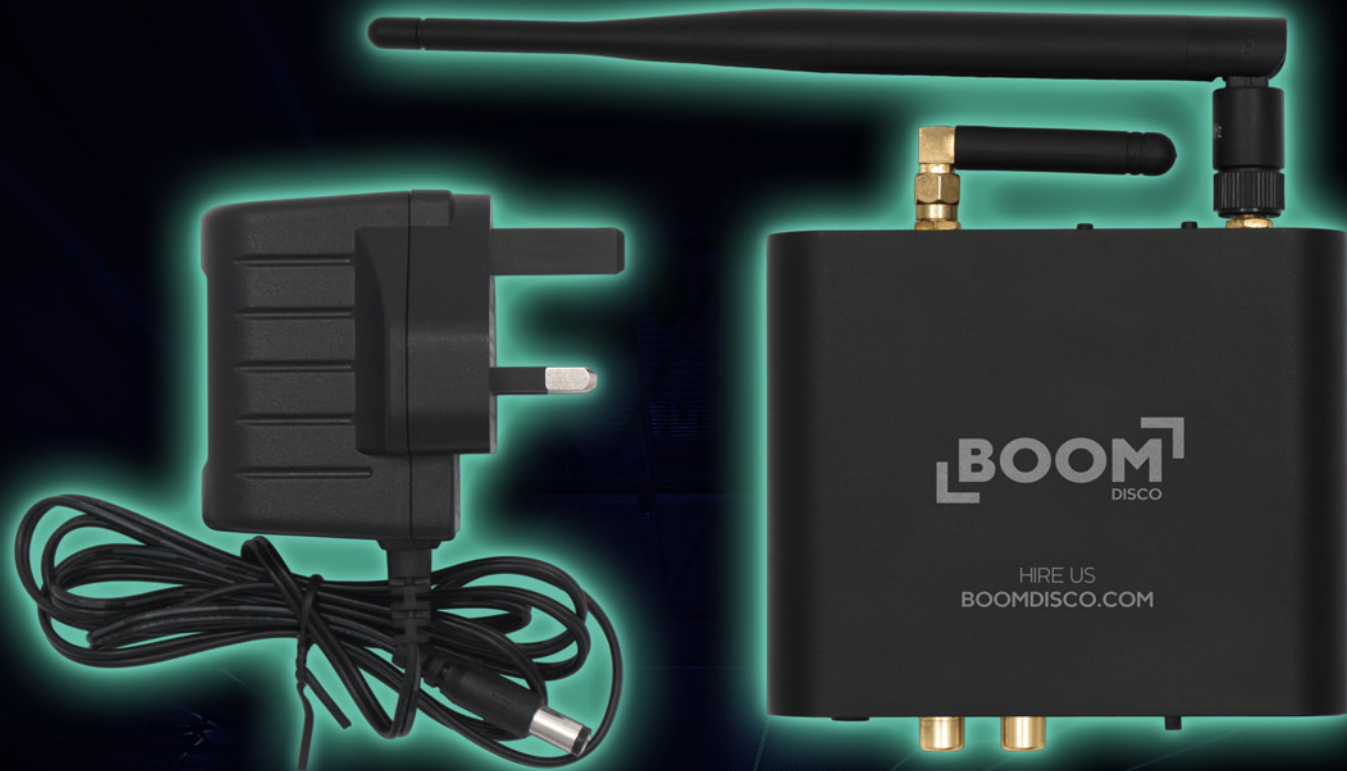

POWER ADAPTOR

BG80 PRO TRANSMITTER



RCA TO 3.5MM JACK,
LIGHTENING & USB-C



RCA



RCA TO 3.5MM

THE SIMPLE GUIDE TO USING YOUR BG80 PRO TRANSMITTERS



- AUDIO INPUT**
3.5 mm Jack for either audio from a music source or direct input for Microphones. (to ensure compatibility use only TBG supplied Microphones).
- RCA AUDIO INPUTS**
For connection to your music source (laptop, tablet smart phone etc.)
- POWER SWITCH**
For selection of Off / Low Power / High Power Modes .
- USB INPUT**
Strictly for TBG use only - **DO NOT CONNECT TO THIS PORT.**
- AUDIO TRANSMISSION ANTENNA**
Transmits Audio signal to headphones via RF.
- BLUETOOTH BUTTON**
For enabling / disabling Bluetooth connection to music source.
- POWER LED**
To indicate when transmitter is turned on / off.
- CHANNEL SELECTOR**
Indicates which channel is being transmitted (Channel 1 – Red, Channel 2 – Green, Channel 3 – Blue).
- BLUETOOTH RECEPTION ANTENNA**
Receives Audio signal from your music source via Bluetooth.
- DC INPUT**
Input for power adaptor and for charging transmitter battery.



 
SAFETY FIRST

PLEASE READ BEFORE SWITCHING ON:

- 1 Always switch off the device and disconnect from mains supply after use.
- 2 Do not use transmitters if damaged by water heat or physical impact etc.
- 3 Do not attempt repair, modify or replace parts of product yourself, this could cause serious harm.
- 4 Do not use or store transmitters near water, in very humid or hot environments.
- 5 Keep away from heat sources, including radiators, space heaters and heat generating electrical equipment. Ensure that temperature is moderate and that equipment is not in direct sunlight or placed on a heat source.
- 6 Use only the supplied power cables and accessories with the product.
- 7 Disconnect Power when not being used for long periods.
- 8 When in use ensure that supply is properly connected, with no visible signs of damage.
- 9 Do not over-load electrical supply sockets.
- 8 Failure to comply with safety guidelines can result in electrical shock, injury, fire, or damage to equipment.

HAVING TROUBLE OR SOMETHING NOT WORKING?

If you are having trouble please check our 'troubleshooting' section on page **38 - 39**.
or call us on **0207 7167 8471**

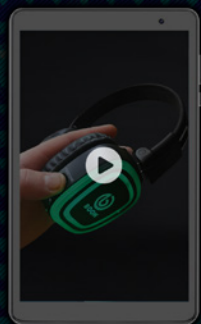

**SCAN TO WATCH
THE SET-UP GUIDE
VIDEO**



SCAN ME!

SET-UP AND USE

1



CONNECT ANTENNA

Connect large Antenna to the RF ANT connector on the transmitter and the small antenna to the BT ANT connector.

2



POWER UP!

Connect the dc power supply provided to the transmitter. The transmitters are supplied fully charged and can run on battery power for up to 5 hrs.

3



GIVE IT SOME SOURCE

Connect to an audio source using either the provided RCA cables or the inbuilt Bluetooth connection.

4



DIAL IT IN

Select Transmission Power level (Low (LO) for transmission distance up to ~75m, High (HI) 300 -500m). For Hi power mode the 9V DC power supply must be connected.

5a



GET CONNECTED

BLUETOOTH CONNECTION

1. Keep the Bluetooth device you're trying to connect to within 1m of the transmitter.
2. Hold the BT button until a small red dot appears at the bottom right corner of the LCD screen. About 3 seconds later, the red/blue LED blinks alternately in Bluetooth pairing status.
3. Enable Bluetooth on your music device and search for T80 and confirm the Bluetooth connection.
4. After your device has paired with the transmitter, the transmitter will automatically enter standby mode, with the blue led blinking slowly every 5 seconds.
5. Play the music source of your Bluetooth enabled device.

WIRED CONNECTION

1. Hold the BT button until the red dot at the bottom right corner of the LED display disappears. When in RCA Line-in audio mode the small LED glows red.
2. Connect a cable from the Audio output on your music source to the RCA Audio input located on the transmitter and play music on your device.

5b



6



CHANNEL YOUR VIBES

Pressing the 'Channel' button changes the channel the transmitter is using. Press to toggle between channels 1,2 & 3. The LED display will show the channel currently selected.

NOTE: When two or more transmitters are working simultaneously, ensure that each transmitter is on a different channel.

7



SHUT IT DOWN

Ensure Transmitters are turned off after use and pack them back into the hard cases before adding back into your BoomBox.

MOBILE TRANSMITTER: BG003 PRO



POWER ADAPTOR & USB-C CABLE



BG003 PRO
TRANSMITTER



HEADSET MICROPHONE



3.5MM TO 3.5MM JACK,
LIGHTENING & USB-C



THE SIMPLE GUIDE TO USING YOUR BG003 PRO TRANSMITTERS



- 1 POWER ON**
Long press powers the transmitter on/off, short press to exit the menu.
- 2 LED INDICATOR**
Illuminates red when the transmitter is powered on, green whilst charging and off when fully charged.
- 3 CHANNEL SELECTOR +/-**
CH+ / CH- buttons cycle through the transmission channels (displayed on the LCD screen). When in the settings menu CH+ / CH- navigate up and down through the menus.
- 4 MENU**
Long press to enter the menu on the LCD screen. When in the menu and a setting has been selected short press to confirm menu selection.
- 5 MICROPHONE VOLUME ADJUSTMENT**
Rotate the wheel to adjust the output volume of a Microphone (if used).
- 6 USB-C CHARGING PORT**
To charge the transmitter connect the supplied USB-C cable and charger.
- 7 3.5MM MICROPHONE JACK**
3.5 mm Mic Jack to connect your Boom Supplied Microphone.
- 8 3.5MM LINE-IN AUDIO INPUT**
3.5 mm Jack input to connect audio from your chosen audio source.
- 9 MIC MUTE**
Press to mute and unmute the wired Microphone.

SAFETY FIRST

PLEASE READ BEFORE SWITCHING ON:

- 1** Do not use transmitters if damaged by water heat or physical impact etc.
- 2** Do not attempt repair, modify or replace parts of product yourself, this could cause serious harm.
- 3** Do not use or store transmitters near water, in very humid or hot environments.
- 4** Keep away from heat sources, including radiators, space heaters and heat generating electrical equipment. Ensure that temperature is moderate and that equipment is not in direct sunlight or placed on a heat source.
- 5** Use only the supplied power cables and accessories with the product.
- 6** Disconnect Power when not being used for long periods.
- 7** When in use ensure that supply is properly connected, with no visible signs of damage.
- 8** Do not over-load electrical supply sockets.
- 9** Failure to comply with safety guidelines can result in electrical shock, injury, fire, or damage to equipment.

HAVING TROUBLE OR SOMETHING NOT WORKING?

If you are having trouble please check our 'troubleshooting' section on page 39.
or call us on **0207 7167 8471**



SCAN ME!

PUMP UP YOUR JAMS

NEED A LITTLE INSPIRATION?

MAKE IT BOOM!

OUR SPECIALIST SILENT DISCO DJS HAVE CAREFULLY CURATED AN ARSENAL OF SPOTIFY PLAYLISTS TO SUIT ALMOST ANY OCCASION.

SET-UP AND USE



1

POWER UP!

Hold the Power button for 3 seconds to turn on or off.

The LED indicator glows red when powered on, and green while charging (off when fully charged).



2a

GIVE IT SOME SOURCE

MICROPHONE CONNECTION

Plug the jack from the Microphone headset into the Microphone jack.



2b

WIRED CONNECTION

If you wish to play music tracks at the same time as using the Microphone connect the secondary device via a wired connection or Bluetooth (skip to 2c). Plug the 3.5mm cable from your music device (phone, tablet, laptop, DJ mixer, etc.) into the Line-In port.



2c

BLUETOOTH CONNECTION

Hold the Menu button for 3 seconds, select: *BT Mode* → On to pair wirelessly. Go to your device's Bluetooth settings and connect to the transmitter.

 


3

CHANNEL YOUR VIBES

Select your channel by pressing the CH+ or CH- to toggle through the available frequencies, the channels will be displayed on the LCD screen.

NOTE: When two or more transmitters are working simultaneously, ensure that each transmitter is on a different channel.

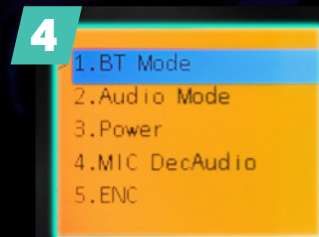

4

DIAL IT IN (OPTIONAL)

BT Mode: Bluetooth Settings.

Audio Mode: For voiceovers whilst playing music ensure 'HiFi' mode is set to ensure crystal clear voiceovers.

Power: Select High/Low Power mode (affects range and battery life).

 
Mic DecAudio: Here you can control Microphone voiceovers. Select from three options:

None - two volumes the same

Partial - when Microphone talk, music volume turns down

All - when Microphone talk, music mute and resume when no talk

ENC: Enable Microphone noise cancelling.

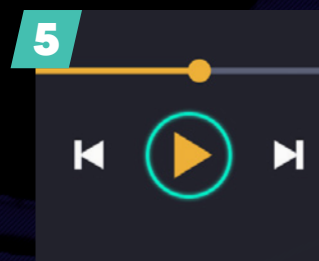

5

DROP THE BEAT

Press play on your connected device or talk into the Microphone.

Guests can now tune in using their headphones.



TIP: Use High Power Mode for outdoor or large spaces (up to 300m & 10 hours of battery life). Use Low Power Mode for smaller indoor areas or to conserve battery (up to 150m & 25 hours of battery life).

AFTER USE

- 1 Unplug any wired music devices, Microphones and chargers from the transmitters.
- 2 Switch transmitters off.
- 3 Pack transmitters and accessories back into their hard cases.
- 4 Repack back into your BoomBox.

HAVING TROUBLE OR SOMETHING NOT WORKING?

If you are having trouble please check our 'troubleshooting' section on page 39. or call us on **0207 7167 8471**

FULLY LOADED TABLETS

If you have upgraded your hire to include our Fully Loaded Music Tablets, you will have received the tablets inside a soft black carry case within your hire box. You will need 1 of our Tablets per channel of music that you wish to provide.

Your tablets comes pre-loaded with music files, no internet required. We recommend our professionally mixed DJ sets (each mix runs for 1-3 hours to create a seamless party vibe). Every mix has been crafted by real DJs exclusively for Boom Disco to keep the energy flowing and avoid any awkward gaps between songs.



3X FULLY LOADED TABLETS



USB-C CABLE



MEDIAMONKEY MUSIC APP

- 1 POWER BUTTON
- 2 VOLUME LEVEL
- 3 3.5MM AUDIO JACK
- 4 USB-C CHARGING PORT

 
SAFETY FIRST

PLEASE READ BEFORE SWITCHING ON:

- 1 Indoor use only. Keep away from rain, moisture, liquid, or damp surfaces.
- 2 Use only the supplied charging cable and connect directly to a wall socket.
- 3 Unplug when not in use or moving the tablets.

SET-UP AND USE

1

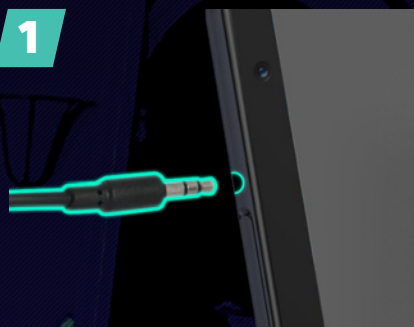

2



3



GET CONNECTED

Use the RCA to multi-input cable provided with each transmitter. Plug the audio jack cable into the top of the tablet and connect the red/white connectors to the transmitter.

 
KEEP THE PARTY GOING

The tablets come with chargers included. We recommend connecting the tablets to the chargers during your event to ensure there are no interruptions.


POWER ON

Simply turn the tablets on by pressing the power button on the side of the device.


4

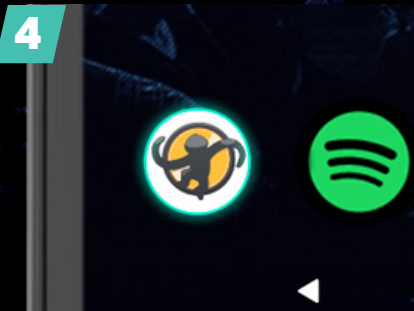

5

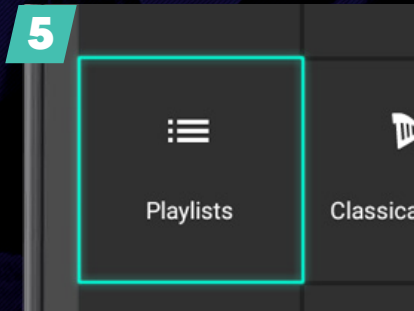 

6

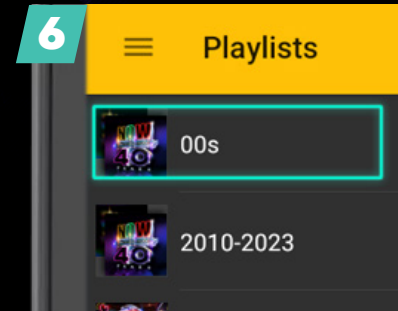 

FIRE IT UP

Tap on the MediaMonkey Music App to access the preloaded music library.

SET THE VIBE & START THE PARTY!

Simply tap Playlists, select Boom Disco DJ Mega Mixes and choose a mix to suit your party: from 80s classics and Kids Disco bops to RnB favourites and Hen-party bangers. OR You can also browse artists, albums and other playlists if you want to be the DJ.

AFTER USE

- 1 Switch off the tablets and unplug from mains power.
- 2 Ensure all charging cables are collected and add back into your BoomBox.

HAVING TROUBLE OR SOMETHING NOT WORKING?


If you are having trouble please check our 'troubleshooting' section on page 40. or call us on 0207 7167 8471

BASIC DISCO LIGHT

If you have upgraded your hire to include Basic Disco Light(s) please follow instructions below.



 BASIC 5-IN-1 DISCO LIGHT

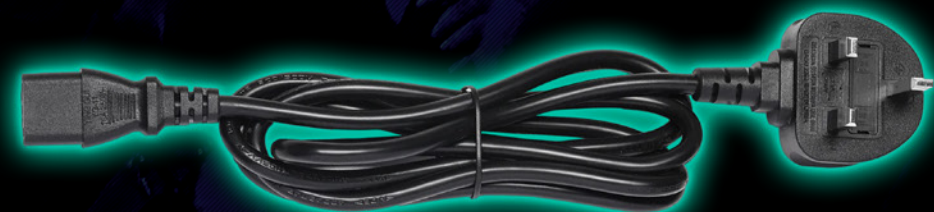

POWER CABLE



REMOTE CONTROL

 
SAFETY FIRST

PLEASE READ BEFORE SWITCHING ON:

- 1 Indoor use only. Keep away from rain, moisture, liquid, or damp surfaces.
- 2 Place safely: mount securely or position on a stable surface at least 3 m (9 ft) from guests.
- 3 Allow ventilation: keep at least 0.5 m clearance around the unit and do not block vents.
- 4 Use only the supplied mains cable and connect directly to a wall socket.
- 5 Do not open the housing. No user-serviceable parts inside - high voltage and laser components.
- 6 Unplug when not in use or before cleaning or moving the unit.
- 7 Strobe Warning: This product contains flashing / strobe lighting effects. These may trigger seizures in individuals with photosensitive epilepsy. Please ensure all guests are aware before use.
- 8 **LASER SAFETY:**
 - A Never look directly into the beams or aim it at people or animals.
 - B Do not aim lasers towards mirrors, glass, or reflective surfaces.
 - C Mount the unit so that the lowest beam is at least 3 m (9 ft) above head height.
- 9 Operate under adult supervision only.

HAVING TROUBLE OR SOMETHING NOT WORKING?

If you are having trouble please check our 'troubleshooting' section on page 38. or call us on 0207 7167 8471

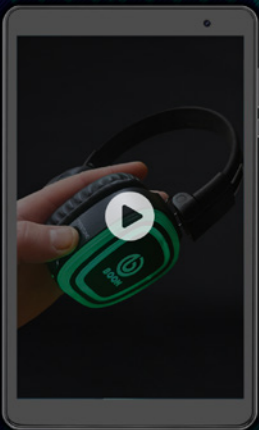

SCAN TO
WATCH THE
SET-UP GUIDE
VIDEO >>>>>>>>>>



SCAN ME!

SET-UP AND USE

QUICK SETUP

- 1 Place or mount the unit on a stable surface.
- 2 Plug in the power cable to a standard wall socket.
- 3 Ensure the switch on the back of the unit is set to 'Auto'. Point the remote at the front of the light and also press 'Auto' on the remote, this will run an automatic cycle through all disco light effects continuously throughout your event.
- 4 Aim the light across the room or dance area (never directly at people).

SIMPLE REMOTE OPERATION

If you wish to experiment with the other settings (rather than leave on auto) see below. Note the 'sound' and 'Sen'89 setting will not be as impactful in a silent disco.



- | | |
|--|--|
| 1 POWER
Turns all lights off / standby. | 6 UV
Turns on UV/blacklight. |
| 2 AUTO
Runs built-in light shows automatically | 7 FLASH
Turns on strobe effect. |
| 3 SOUND
Reacts to music using the built-in Microphone | 8 MOTOR + / -
Controls rotation speed (LED modes only). |
| 4 LED
Activates the Moonflower & Water-Wave LED effects. | 9 SPEED + / -
Adjusts strobe rate. |
| 5 LS
Activates the laser effects. | 10 SEN + / -
Adjusts Microphone sensitivity in Sound mode. |

AFTER USE

- 1 Allow to cool before handling.
- 2 Switch off by pressing red button on remote.
- 3 Wipe clean with a soft, dry cloth (no alcohol or solvents).
- 4 Coil the cable(s) neatly
- 5 Repack back into your BoomBox

MINI UV BATTENS



MINI UV BATTEN



POWER CABLE WITH SWITCH



SAFETY FIRST

PLEASE READ BEFORE SWITCHING ON:

- 1 Indoor use only. Keep away from rain, moisture, or damp areas.
- 2 Ensure good ventilation and do not block air vents - overheating can occur.
- 3 Use only the supplied power cable and ensure it's not damaged, twisted, or trapped.
- 4 Always unplug the unit when not in use or before cleaning or moving.
- 5 Do not use with dimmer packs or connect to adjustable voltage outputs.
- 6 Do not open the housing - there are no user-serviceable parts inside.
- 7 Keep away from heat sources such as radiators or other electrical equipment.
- 8 Never touch the light housing during or immediately after use - it can get hot. Allow at least 5 minutes to cool before handling.
- 9 Do not look directly into the light beam.
- 10 Keep at least 50 cm clearance around the light for safe airflow.
- 11 Avoid operating near flammable materials (e.g. curtains, decorations).
- 12 Operate under adult supervision only. Keep out of reach of children and never leave the light unattended while running.
- 13 Do not expose to drastic temperature changes - allow time to reach room temperature before switching on.

HAVING TROUBLE OR SOMETHING NOT WORKING?

If you are having trouble please check our 'troubleshooting' section on page 38.
or call us on 0207 7167 8471

SET-UP AND USE

QUICK SETUP

- 1 Place your lights on a flat, stable surface or mount them securely if using the bracket.
- 2 Plug in the power cable to a standard wall socket.
- 3 Use the switch on the power lead to turn the lights ON or OFF.



TIP: For best effect, position lights so they face the dance floor or ceiling, avoiding direct eye level.

AFTER USE

- 1 Switch OFF using the power switch.
- 2 Unplug from the mains.
- 3 Allow to cool completely before handling.
- 4 Wipe clean with a soft, dry cloth (no alcohol or solvents).
- 5 Repack back into your BoomBox.



SCAN ME!

 
PUMP UP YOUR JAMS

NEED A LITTLE INSPIRATION?


MAKE IT BOOM!

OUR SPECIALIST SILENT DISCO DJS HAVE CAREFULLY CURATED AN ARSENAL OF SPOTIFY PLAYLISTS TO SUIT ALMOST ANY OCCASION.


PREMIUM DISCO LIGHT

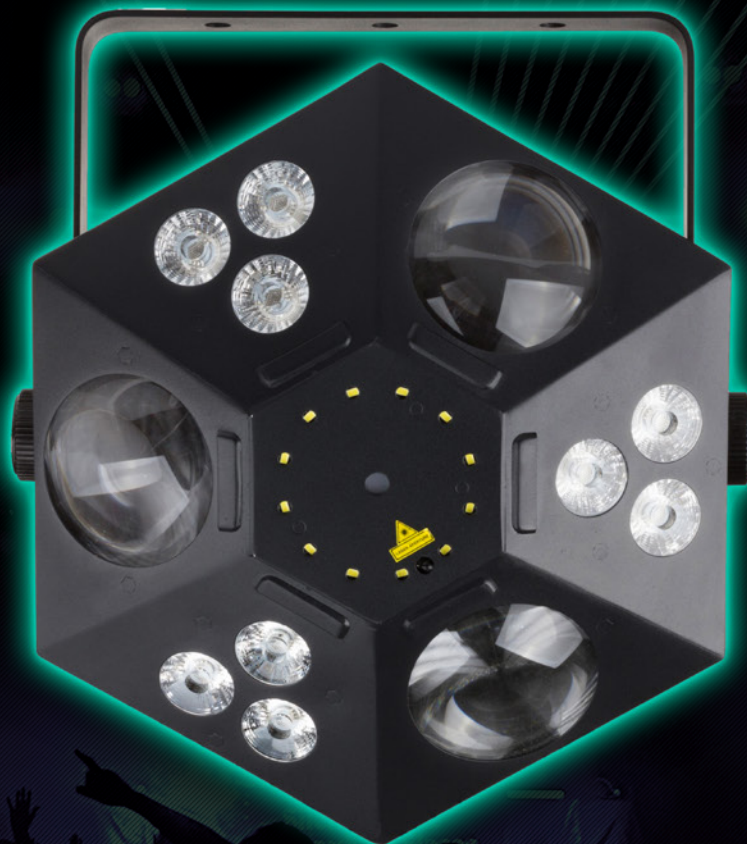

BASIC 5-IN-1 DISCO LIGHT

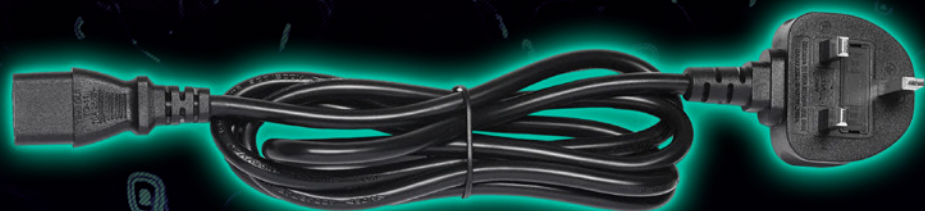 

POWER CABLE

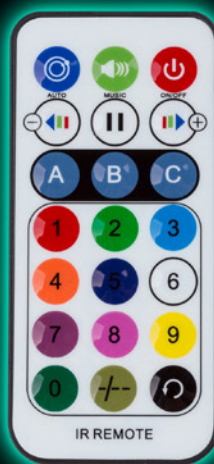 

REMOTE CONTROL

 
SAFETY FIRST

PLEASE READ BEFORE SWITCHING ON:

- 1 Indoor use only. Keep away from rain, moisture, liquid, or damp surfaces.
- 2 **LASER SAFETY:**
 - A Never look directly into the beams.
 - B Do not aim lasers towards mirrors, glass or reflective surfaces.
- 3 Position safely: keep the light at least 1 metre away from walls, ceilings, or people.
- 4 Ventilation: don't cover vents or fans - the light needs airflow to stay cool.
- 5 Power: always use the supplied mains cable and a standard wall socket (no dimmers or extensions that aren't surge-protected).
- 6 Supervise use: this product isn't suitable for children to operate.
- 7 Aim the light across the room or dance floor (not at guests) for the best visual effect and safety.
- 8 Store in a dry place.

HAVING TROUBLE OR SOMETHING NOT WORKING?

If you are having trouble please check our 'troubleshooting' section on page 38. or call us on **0207 7167 8471**

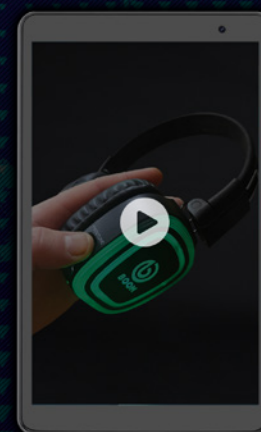

SCAN TO
WATCH THE
SET-UP GUIDE
VIDEO >>>>>>>>>>



SCAN ME!

 
SET-UP AND USE

QUICK SETUP

This guide shows you how to activate Auto Mode. Auto Mode runs a continuous cycle through all disco light effects throughout your event, leaving you to join the party.

- 1 Place your light on a stable, flat surface or mount it securely using the hanging bracket.
- 2 Plug in the power cable. The unit will light up and is ready to use.
- 3 Point the Remote to the front of the light and click the top left blue button 'Auto'
- 4 You have three Auto Mode options. Press the same blue button on the remote to scroll through the 3 auto modes and select your preferred option.
- 5 If you want to add the laser, insert the key (attached to the unit), turn it to ON, and the laser effect will activate – please reread the laser safety instructions on page 26.
- 6 If you wish to experiment with the other settings (rather than leave on auto) please see options below from the remote. Note: the 'Mix Sound' setting will not be as impactful in a silent disco.

REMOTE OPERATION

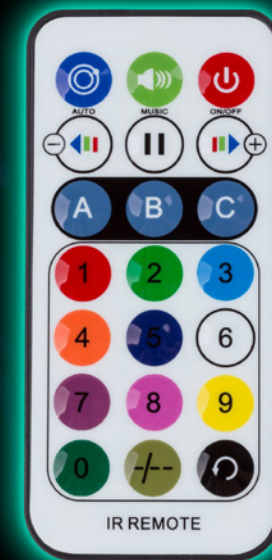

- AUTO MIX**
Turns all lights off / standby.
- MIX SOUND**
Runs built-in light shows automatically.
- POWER**
Reacts to music using the built-in Microphone.
- WASH COLOUR**
Turns on UV/blacklight.
- PAUSE**
Turns on strobe effect.
- WASH PROJECTOR**
Activates the Moonflower & Water-Wave LED effects.
- LASER**
Activates the laser effects.
- FLASH**
Activates the laser effects.
- SPEED**
Controls rotation speed (LED modes only).
- AUTO / SOUND**
Adjusts strobe rate.

AFTER USE

- 1 Switch off using the key and unplug from the mains.
- 2 Allow to cool before packing away.
- 3 Coil the cable(s) neatly.
- 4 Repack back into your BoomBox.



SCAN ME!

PUMP UP YOUR JAMS

NEED A LITTLE INSPIRATION?

 
MAKE IT BOOM!

OUR SPECIALIST SILENT DISCO DJs HAVE CAREFULLY CURATED AN ARSENAL OF SPOTIFY PLAYLISTS TO SUIT ALMOST ANY OCCASION.

HAZE/SMOKE MACHINE



SMOKE MACHINE

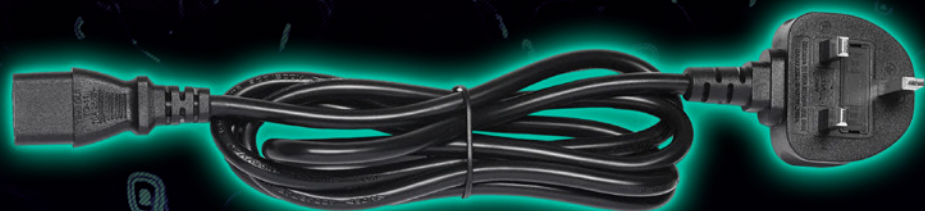

POWER CABLE



FOG REMOTE CONTROL



LIGHT REMOTE CONTROL

 
SAFETY FIRST

PLEASE READ BEFORE SWITCHING ON:


- 1 Indoor use only. Keep away from rain, moisture, liquid, or damp surfaces.
- 2 Place on a flat, stable surface, or mount safely using the supplied bracket.
- 3 Use only approved smoke fluid. Other fluids may clog the heater or damage the unit.
- 4 Never operate dry. Always ensure fluid is above the minimum level before turning on.
- 5 Keep distance: aim smoke away from people, walls, and fire alarms (at least 1.5m).
- 6 Allow ventilation: don't cover vents or block the fan outlet.
- 7 Power safely: use the supplied power cable and connect directly to a wall socket.
- 8 Do not open or modify the unit. There are no user-serviceable parts inside.
- 9 Unplug after use and before refilling, cleaning, or moving the unit.

HAVING TROUBLE OR SOMETHING NOT WORKING?

If you are having trouble please check our 'troubleshooting' section on page 38. or call us on **0207 7167 8471**

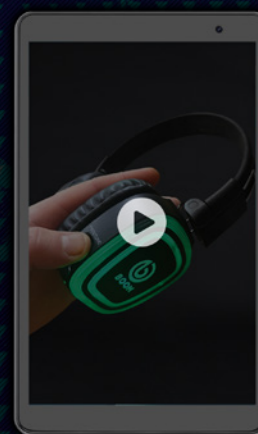

 SCAN TO
WATCH THE
SET-UP GUIDE
VIDEO >>>>>>>>>>

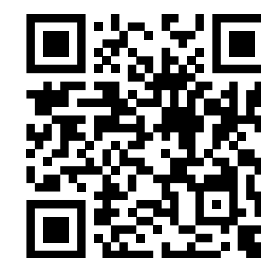


SCAN ME!

SET-UP AND USE

QUICK SETUP

- 1 Position the machine on a level, heat-resistant surface.
- 2 The tank comes ready filled with enough fluid for 2 hours (with short bursts). Do not add any other fluid to the tank.
- 3 Do not overfill or use any flammable liquid.
- 4 Plug in the power cable and ensure the switch on the back is OFF before connecting.
- 5 Turn ON the power switch.
- 6 Wait approx. 3-5 minutes for the device to warm up.
- 7 Press and hold the unlock button on black remote for a few second to release a short burst of fog. Lights can be controlled using the 'lights' remote'.
- 8 If fogging stops when pressing the unlock button on black remote then wait 3-5 minutes for machine to reheat.

 **TIP: For best results, use short bursts of smoke to build atmosphere gradually**

 
AFTER USE

- 1 Switch OFF and unplug from the mains.
- 2 Allow to cool fully before handling.
- 3 Empty any remaining fluid.
- 4 Wipe the outside with a soft, damp cloth (no alcohol or solvents).
- 5 Repack back into your BoomBox.

BUBBLE MACHINE



PREMIUM LED BUBBLE MACHINE

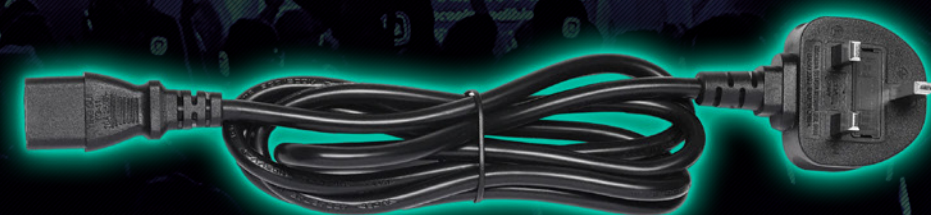

POWER CABLE



WIRED REMOTE CONTROL



SAFETY FIRST

PLEASE READ BEFORE SWITCHING ON:

- 1 Indoor use only. Keep away from rain, moisture, liquid, or damp surfaces.
- 2 Place safely: on a flat, stable surface away from guests and electrical sockets.
- 3 Allow ventilation: do not block vents or airflow at the rear or sides of the unit.
- 4 Use only the supplied power adapter and plug directly into a wall socket (no dimmers or extensions).
- 5 No user-serviceable parts. Do not open the housing - high-voltage components inside.
- 6 Unplug when not in use or before refilling, cleaning, or moving the unit.
- 7 Operate under adult supervision only. Do not aim bubbles directly at faces, pets, or heat sources.

HAVING TROUBLE OR SOMETHING NOT WORKING?

If you are having trouble please check our 'troubleshooting' section on page 38.
or call us on 0207 7167 8471



SCAN ME!

PUMP UP YOUR JAMS

NEED A LITTLE INSPIRATION?

MAKE IT BOOM!

OUR SPECIALIST SILENT DISCO DJS HAVE CAREFULLY CURATED AN ARSENAL OF SPOTIFY PLAYLISTS TO SUIT ALMOST ANY OCCASION.

SET-UP AND USE

QUICK SETUP

- 1 Place the machine on a level, dry surface- ideally 1-2 m away from the dancefloor.
- 2 On the front of the bubble machine is a twist knob. This releases a pin which opens up the machine, gaining access to the 'bubble fluid tank/well'. Fill the tank with bubble fluid (up to the marked fill line). Do not overfill and be careful when moving machine as the fluid will spill over from the tank/well.
- 3 Plug in the power adapter and switch the unit ON.
- 4 Press the buttons on the remote:



- A Bubbles ON
- B Bubbles OFF
- C LED ON / press again to change colour
- D LED OFF



TIP: Use short bursts for the best continuous bubble flow without emptying the tank too quickly.

 
AFTER USE

- 1 Switch OFF and unplug the power adapter.
- 2 Pour out any leftover bubble fluid and dry the bubble fluid well with a clean towel or cloth.
- 3 Wipe the exterior with a soft, dry cloth (no solvents).
- 4 Allow to fully dry before packing away.
- 5 Repack back into your BoomBox.

SNOW MACHINE



PREMIUM SNOW MACHINE

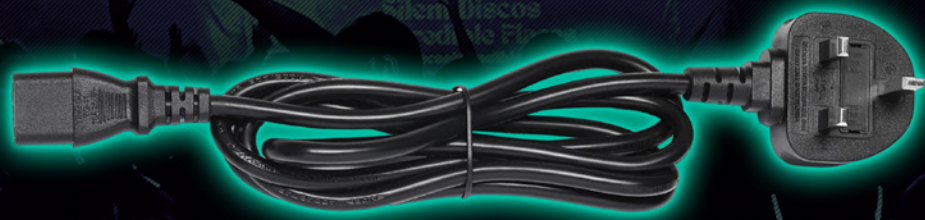

POWER CABLE



SNOW FLUID



WIRED REMOTE CONTROL

 
SAFETY FIRST

PLEASE READ BEFORE SWITCHING ON:

- 1 Indoor and outdoor use. Keep away from rain, moisture, liquid, or damp surfaces.
- 2 Use only approved snow fluid. Never use water or other liquids - they can damage the pump.
- 3 Place safely: on a flat, stable surface with at least 1 metre clearance around the unit.
- 4 Allow ventilation: do not block vents or air inlets.
- 5 Use only the supplied power cable and connect directly to a standard wall socket (220-240V).
- 6 No user-serviceable parts. Do not open the housing – high voltage and hot components inside.
- 7 Unplug when not in use or before refilling, cleaning, or moving the unit.
- 8 Operate under adult supervision only. The nozzle becomes hot during use - allow to cool before touching.

HAVING TROUBLE OR SOMETHING NOT WORKING?

If you are having trouble please check our 'troubleshooting' section on page 38. or call us on 0207 7167 8471

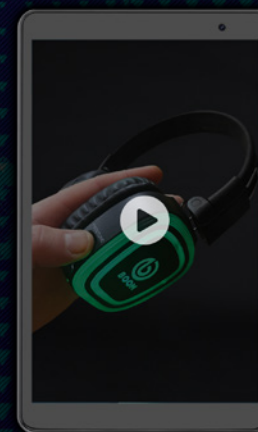

SCAN TO
WATCH THE
SET-UP GUIDE
VIDEO >>>>>>>>>>



SCAN ME!

SET-UP AND USE

QUICK SETUP

- 1 Place the machine on a flat, stable surface facing the area you want to cover.
- 2 Fill the reservoir with approved snow fluid up to the marked fill line (do not overfill).
- 3 Plug in the power cable to a mains socket.
- 4 Switch ON at the rear of the unit. The machine will warm up for 3-5 minutes.
- 5 Press the button on the remote to start or stop the snow effect.
- 6 For the most natural look, angle the nozzle upwards or across the room.



TIP: Use short bursts every few minutes to maintain consistent snow without overloading the space.

AFTER USE

- 1 Switch OFF and unplug from the mains.
- 2 Allow to cool fully before handling.
- 3 Empty any remaining fluid from the tank.
- 4 Wipe the outside with a soft, damp cloth (no alcohol or solvents).
- 5 Allow to dry completely before packing away.
- 6 Repack back into your BoomBox.

TROUBLESHOOTING

NO MUSIC / AUDIO ON HEADPHONES?

- Check that Headphones are switched on, connected to the correct channel and volume turned up.
- Check that your music playing device is working correctly, playing music and that the volume is turned up on the device.
- Check that the music playing device is correctly connected to the transmitter, ensure the transmitter is turned on and transmitting on the right channel.
- If still no output, try using a different audio device and/or cables with the transmitter.
- The headphones will turn off after not receiving a signal from the transmitters for 10 minutes, to stop the transmitters from sending a signal simply turn the switch on the transmitters from HI to OFF.
- Check the headphone/transmitters are within range – in open space, typically up to 500m (or up to 300m for the HT003 mobile model). This can be reduced significantly with barriers (walls, metal barriers, subterranean spaces etc). In some cases, elevating the transmitters will help transmission beyond low level barriers.

NO LIGHTS SHOWING ON HEADPHONES?

- If you press and hold the LED button for 2 seconds, it will change the LED (see Page 6 point 5).
- To revert back to the normal LED on setting, press and hold the LED button once or twice for 2 seconds.

INTERFERENCE, REDUCED RANGE OR SIGNAL DROP OUT?

- If using two or more transmitters simultaneously, check they are transmitting on different channels. If two are transmitting on the same channel the signals will cancel each other out, giving no or very little signal to the headphones.
- Check there is no interference from other wireless equipment in the vicinity, if operating on similar frequencies this may cause interference.

TRANSMITTER SET-UP

- 1 Check Volume control on the headphone is turned up.
- 2 Check Music Device volume setting is above 50%.
- 3 Check headphone is set to the correct channel that you're playing music from.
- 4 Ensure the Transmitters are each set to different channels.
- 5 If the transmitters do not turn on check the power cable is connected for 30 minutes before trying again.

FOR THE BG003 MOBILE TRANSMITTER

- **Weak or intermittent signal:** Move closer to the transmitter, switch to High Power mode, or remove nearby obstructions.
- **Bluetooth not pairing:** Enable BT Mode in the menu and make sure the transmitter is visible; unpair any old devices if needed.
- **Battery not lasting:** Use Low Power mode for extended runtime or fully recharge before use.
- **Microphone not working:** Confirm the mic is plugged into the Mic Input (not Line-In) and the volume is adjusted.

MUSIC IS COMING OUT DISTORTED

- This could be because the volume on your device (mixer, phone, laptop or audio player) might be too high. Try turning the volume up on the headphones and turning the volume down on the music player a little bit.
- Remove electrical equipment surrounding the transmitter, such as: phone chargers, WIFI Routers, Boosters, Radio Microphones, Walkie-Talkies.
- Make sure there are no power cables going over the transmitter as it can cause electric interference.
- Ensure each of the transmitters are set to separate channels.
- If you're still getting this problem then try relocating the transmitter somewhere clearer and higher.
- Try turning off the Headset, waiting 2 mins and turning back on.

STATIC CAN BE HEARD ON ONE OF THE CHANNELS

- You may hear a faint level of static on the channels when no music is playing, this is completely normal and is due to the radio frequency technology the headphones use.
- If you can still hear excessive static after the music is playing, please ensure each transmitter is set to a separate channel, and that no devices in the area are interfering.
- Sometimes the power supply can cause static – please try the transmitters on battery mode.

MUSIC PLAYING ON CHANNEL 1 BUT PICKING UP RANDOM NOISES ON CHANNEL 2

- This may be because you have only plugged in 1 transmitter. If you're only using 1 channel, we would advise you to plug in all of the transmitters, even if you don't have any audio going through them.
- This is because the Headphones will try and find the transmitter even if it's not plugged in, they can pick up other signals which may interfere.



FAULTY EQUIPMENT?

If you have received any headphones or equipment with issues please let us know on the day of delivery so we can attempt to send replacements in time for your event.

STILL HAVING TROUBLE? PLEASE CALL US

Call us on **0207 7167 8471**



SCAN ME!

PUMP UP YOUR JAMS

NEED A LITTLE INSPIRATION?

MAKE IT BOOM!

OUR SPECIALIST SILENT DISCO DJs HAVE CAREFULLY CURATED AN ARSENAL OF SPOTIFY PLAYLISTS TO SUIT ALMOST ANY OCCASION.

IMPORTANT INFORMATION

PLEASE REVIEW THE INFORMATION BELOW:

All headphones and all equipment must be returned as we sent them to you, ensuring that all headphones are returned and packed as you received them.

Whilst we understand that you may not be able to put them back exactly how you received them, it is important they are packaged so that they do not move around in the box during transit – this is to prevent damage to the equipment.

Ensure the transmitters are packed in their protective black case. This black case fits inside the Boomboxes as received. If any of your headphones or equipment is broken or lost, there is a charge – please check our terms and conditions (on your booking email). The person who booked and signed for the hire is liable for any loss or damage whilst the equipment is in your care. We accept no responsibility for your hire and any faults/damage made by yourself or guests, during transit etc. under lack of care. All of our headphones and equipment are checked thoroughly before they are sent to you and after they are returned to us.

MISSING COLLECTION OR DELIVERY FROM THE COURIER WILL RESULT IN A FEE.

The courier will charge this fee if they attempt to deliver or collect and no one is available, so please ensure you are available on the day that the collection has been scheduled. We will try our hardest to avoid this charge but please ensure someone is present.

Please contact us on **020 7167 8471** if you need to change your collection.

RETURNING THE EQUIPMENT

Repack your equipment into the BoomBox(s)

Please pack the headphones and all equipment how you received them making sure it's tightly packed with all the cables included and well packed in the case.

It is extremely important that all the cables come back to us as there will be a charge for missing headphones, transmitters or cables.

PACKING YOUR BOOMBOX(S)

- 1 Place the transmitters and cables into the black transmitter case.
- 2 Fit the transmitter case into the box..
- 3 Fold the headphones and place them into the box in rows.
- 4 Add any extras back into the boxes they came in.

Before closing the box, ensure it is all neatly packed and that you can close the box securely. Make sure nothing is hanging out as it will break or cut the object.

Ensure you secure the box with the security tags provided. This will prevent the items coming loose during transit.

Take a photo of the box before collection/drop-off.

COLLECTION

 
Please review your Delivery and Collection email that was sent to you by the courier and check these details are correct.

Ensure the original label on your box(es) is removed! – this will prevent this box(es) being delivered back to your original address.

The driver will bring return labels when they arrive for collection

NEED ADDITIONAL SUPPORT? PLEASE CALL US

Call us on **0207 7167 8471**

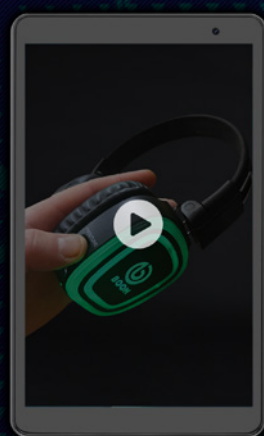

SCAN TO
WATCH THE
SET-UP GUIDE
VIDEO >>>>>>>>>>



SCAN ME!





BOOM⁷

DISCO

 BOOMDISCOUK

[BOOMDISCO.COM](https://www.boomdisco.com)
020 71678471